



## Bluetooth Test Indicator


### BLEndicator User Guide

#### Important Notes

- Turn off the device after use. It will NOT turn off automatically.
- Do NOT open the device. Opening causes permanent damage and voids the warranty.
- If the device connects but doesn't send any reading, power cycle the device (turn off and on) and connect again.

#### Description

- 1. On/Off Button** – push on and push off
- 2. Tri-Color LED**
  - Blue – device is on
  - Red – device is in charge
  - Green – device is fully charged
- 3. Dovetail Holder** – standard dovetail holder to hold device
- 4. USB Port** – connects to USB cable to charge
- 5. Probe Handle** – pull to change probe direction

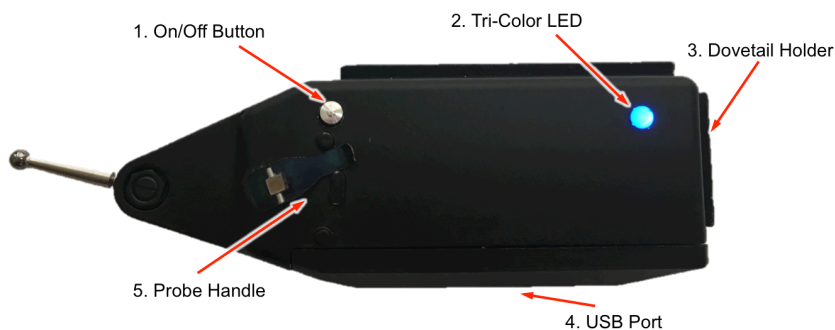

#### Included In The Package

- BLEndicator
- USB Charging Cable
- USB Power Adapter
- User Guide

#### Compatible Software

- iOS: MultiGage Reader
  - Windows: Dial Reading (BLE Dongle Required)
- iOS App can be directly downloaded from the App Store for FREE. Windows programs are available on Motionics website.

#### Quick Start

- Turn on BLEndicator.
- Carefully mount BLEndicator on a holder and engage the probe and work piece.
- Plug in USB Bluetooth dongle if using Windows PC.
- In the software, search for nearby devices and connect to **BLEndicatorXXX**.
- Pairing takes a few seconds. Once connected, reading shows in the software.
- Move the BLEndicator body to adjust reading to around middle of the measurement range.
- Press Zero button in the software to establish a zero datum and start measurement.