


Bluetooth Test Indicator BLEndicator User Guide

⚠ Important Notes

- Turn off the device after use. It will **NOT** turn off automatically.
- Do **NOT** open the device. Opening causes permanent damage and voids the warranty.
- If the device connects but doesn't send any reading, power cycle the device (turn off and on) and connect again.

Description

- ① **On/Off Button** – push to turn on/off
- ② **Tri-Color LED**
 - – Device is on
 - – Device is in charge
 - – Device is fully charged
- ③ **Dovetail Holder** – standard dovetail holder to hold device
- ④ **USB Port** – connects to USB cable to charge
- ⑤ **Probe Handle** – pull to change probe direction

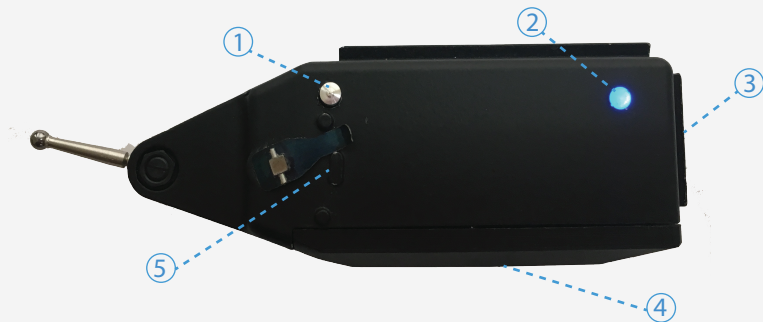

Included in the box

- BLEndicator 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X

Compatible Software

- iOS: DialRead, DialReadPad, MultiGage Reader
- Android: DialReading
- Windows: Dial-Reading (BLE Dongle Required)
- iOS App can be directly downloaded from the App Store for FREE.
- Android App can be directly downloaded from the Google Play Store for FREE.
- Windows software is available on Motionics website.

Quick Start

- Turn on BLEndicator.
- Carefully mount BLEndicator on a holder and engage the probe and work piece.
- Plug in USB Bluetooth dongle if using Windows PC.
- In the software, search for nearby devices and connect to **BLEndicator XXX**.
- Pairing takes a few seconds. Once connected, reading shows in the software.
- Move the BLEndicator body to adjust reading to around middle of the measurement range.
- Press Zero button in the software to establish a zero datum and start measurement.