




Wireless Measurement Read WiMER3 User Guide

⚠ Important Notes

- Turn off the device after use. It will **NOT** turn off automatically.
- Do **NOT** open the device. Opening causes permanent damage and voids the warranty.

Description

- ① **Sensor Connector** – connect to Mitutoyo linear gage with RM12BPE-6PH connector
- ② **Tri-Color LED**
 - – Device is on
 - – Device is in charge
 - – Device is fully charged
- ③ **Charge Port** – connect to cable to charge WiMER3
- ④ **On/Off Button** – press to turn WiMER3 on/off

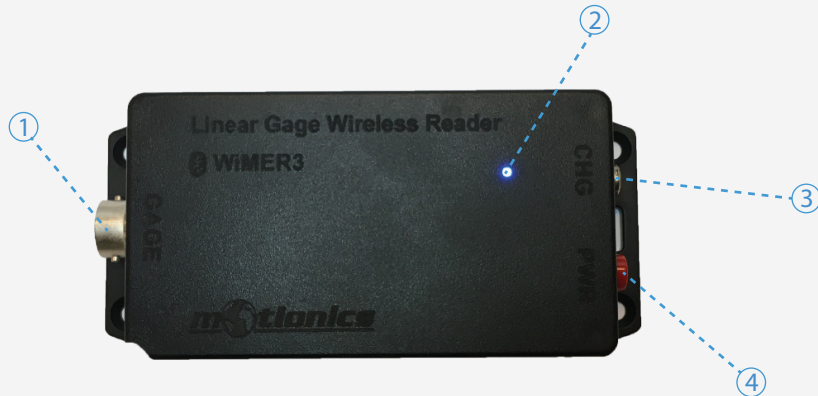

Included in the box

- WiMER3 Base 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X

Compatible Software

- iOS: DialRead, DialReadPad, MultiGage Reader
- Android: Dial Reading
- Windows: Dial Reading (USB Bluetooth Dongle Required)
- iOS Apps can be directly downloaded from the App Store for FREE.
- Android and Windows programs are available on Motionics website.

Quick Start

- Turn on your WiMER3 and connect it to a Mitutoyo linear gage.
- Plug in USB Bluetooth dongle if using Windows PC.
- Run one of the aforementioned Apps/software.
- If it is the first time running the App, enter setting page.
- In the setting page, enter resolution of the linear gage in millimeter and save. There is no need to enter this value again unless you are using a different linear gage.
- In the software, search for nearby devices and connect to **WiMER3-XXX**.
- Wait for the App to establish sensor connection and start reading values from WiMER3.